

# Setup manual

Wired 2D scanner

Ver 1.1

**Warm Tip: Do not discard this manual !!!**

## Restore defaults

---

Reading the barcode of "restore factory value" will restore all attribute settings of scanning gun to factory status.



factory reset

## Scan mode:

---

**Key trigger mode:** in this mode, press the start key to start reading code, and stop reading code after reading code successfully or releasing the trigger key.



\* Key mode\*

**Automatic continuous scanning mode:** after the setting is successful, the scanning light will be on for a long time, and the barcode will be read automatically when there is a barcode passing by. The same barcode cannot be read repeatedly unless it is removed and re read.



Automatic continuous scanning

## Terminator settings

---

In the process of scanning, you can add the corresponding end symbol to the scanning gun according to the requirements.



\* CR\*



TAB



End no

## USB communication mode

---

The scan gun is output in USB keyboard port mode by default.



\* USB keyboard\*

## USB virtual serial mode

---

When the scanning gun uses USB communication interface, but the host application program uses serial communication mode to receive data, it can set the scanning gun to USB virtual serial communication mode.



USB Virtual serial port

9600

Note: in the USB virtual serial port mode, the serial port protocol parameters of the device need to be set and matched according to the serial port parameters of the host application program. The default parameter is "8 No 1 no", 9600

## Baud rate

---

Baud rate is the number of bits transmitted per second in serial port data communication. The baud rate used by scanning gun and data receiving host must be consistent to ensure the accuracy of data transmission.



9600bps\*



15200bps

## Decoding tone settings

---



\* Turn on the voice\*



turn sound off

## Keyboard Language:

---

Follow below instructions to configure the keyboard language before you use it.



\* US\*



France



Germany



Spain



Italy



Portugal



Q Turkey Q



F Turkey F

### Warranty card

**Dear Customer:**

Thank you for purchasing our products, please keep this card in good condition and present it when you claim for warranty!

Warranty Card:

User Name:	Tel:	Distributor Stamp	Distributor Name:
Model Number:	Serial No:		Distributor Tel:
Purchase Date:			Distributor Add:

**Limited Warranty:**

1. Netum warrants this product against defects in material and workmanship, under normal use and service, for one (1) year from the date of purchase.
2. During the warranty period, Netum will, at its option, repair or replace the defective product at no charge provided that you deliver the product to Netum service center.
3. Buyer is responsible for shipment of the product to Netum and assumes all costs and risks associated with this transportation. Return shipment to Buyer will be at Netum's expense. Buyer shall be responsible for return shipment charges for product(s) returned where Netum determines that there is no defect or where Netum determines that the product is not eligible for warranty repair or replacement.

**What May Void the Warranty:**

This Limited Warranty may be null and void in the following circumstances:

1. Misuse, neglect, accidental damage, unauthorized repair, or tampering of any product by the end user or any third party;
2. Improper installation or failure to conduct regular maintenance or cleaning of any product by the end user or any third party;
3. Failure of the end user or any third party to exercise caution to protect any covered product or part from electrostatic discharge damage, adverse temperature and humidity conditions.
4. Incompatibility is not a defect covered by the Netum warranty.